 
 
INSTALLATION INSTRUCTIONS FOR MINIBARS

 
9200H & 9200I SERIES



9200S SERIES



9200LX SERIES





Star Headlight & Lantern Co., Inc.

455 Rochester Street Avon, NY 14414



Phone: 585-226-9500 Toll Free Fax: 888-478-2797



www.star1889.com

		Current		Flash Rate of	Total Flash Rate
<u>Model</u>	<u>Voltage</u>	Draw	Light Source	Light Source	Of Minibar
9200H	12 VDC	8 Amps	50 Watt Halogen Bulb	95FPM	285FPM
9200H-24V	24VDC	4 Amps	50 Watt Halogen Bulb	95FPM	285FPM
9200H-WY	12 VDC	8 Amps	50-Watt Halogen Bulb	150FPM	450FPM
9200H-WY24	24 VDC	4 Amps	50-Watt Halogen Bulb	150FPM	450FPM
9200I	12 VDC	6.5 Amps	35 Watt Incandescent Bulb	95FPM	285FPM
9200S	12-24 VDC	2 Amps	11.25-Joule Strobe Head	130DFPM (260FPM)	1040FPM
9200SQ	12-24 VDC	2 Amps	17.7-Joule Strobe Head	85QFPM (340FPM)	1360FPM
9200LX1	12 VDC	2.4 Amps	24 High Intensity LED's	85 FPM	170 FPM
9200LX2	12 VDC	4.2 Amps	42 High Intensity LED's	85 FPM	170 FPM

MOUNTING INSTRUCTIONS FOR PERMANENT MOUNT LIGHTS

- IMPORTANT: Please read all of the following instructions before installing your new warning light.
 This instruction sheet applies only to the models listed at the top of this sheet.
- 2. CAUTION: All of our DC powered warning lights are polarity sensitive. These lights are polarity protected only if the appropriate fuse is used. All wires connected to the positive terminal of the battery should be fused at the battery for their rated load. Testing the light before this fuse is properly installed will void the warranty on the light.
- Remove the dome from your mini-bar. Take care not to damage the gasket. Place the light in the exact position it is to be mounted.
- 4. Using the base as a template, mark four holes on the mounting surface. Take care to ensure that the base does not move while you are marking each of the four holes.
- Remove the base and drill a 3/8" hole in the four marked spots.CAUTION: Take care not to drill through the headliner below.
- Push the enclosed rubber well nuts through the holes until the bottom side of the wider lip rests on the surface of the vehicle.
- 7. <u>For external wiring of your new Star mini-bar skip to Step 8.</u> For internal wiring, proceed as follows: Remove the headliner from the inside of the vehicle. Draw two diagonal lines between the well nuts in the opposite corners. Mark the location at which they cross. Drill a 3/8" hole in the center marked location. Place the light on the surface of the vehicle, routing the wires through the hole. Align the four other holes with the well nuts, install the screws, and tighten until snug. Skip to Step 9.
- 8. For external wiring, place the light on the mounting surface and align the holes with the well nuts. Install the screws and tighten until snug.
- 9. Replace the dome on your mini-bar.
- 10. The black wire is the ground lead and should be connected to a good chassis ground.
- 11. Connect the red wire to the positive side of the power supply through your switch. (A single-pole, two-position switch is available from Star part SP#3860-1.) Be sure to use the appropriate fuse based upon the current draw shown on the chart above and to check the label on the warning light and switch for proper voltage.
- 12. Photocell feature for the 9200S and 9200SQ only: These strobe versions of our minibars contain a photocell that will automatically switch the minibar to low power at night.

<u>Please Note:</u> These instructions are provided as a general guideline only. Specific mounting, wiring, and/or weather-sealing may be necessary and are the sole responsibility of the installer. Star Headlight & Lantern Co., Inc. assumes no responsibility for the integrity of the installation for this or any of its products.

MOUNTING INSTRUCTIONS FOR MAGNET MOUNT LIGHTS

<u>WARNING!!!</u>! Care should be taken when positioning any warning light on the roof, dash, or instrument panel of the vehicle, so that the light and/or cord does not interfere with the proper operation of any airbags! Failure to heed this warning may result in serious or fatal injury.

IMPORTANT: Please read all of the following instructions before installing your new warning light.

- CAUTION: Please be sure to check that your cigarette plug outlet is properly fused. Testing
 the light before this fuse is properly installed will void the warranty on the light.
- 2. If you are mounting the light on the roof of your vehicle, take extreme care to ensure that the magnets are firmly seated on your roof, and that the pull of the magnets is sufficient to secure the light in place. Because the composition of the metal in the roofs of different vehicles may vary, as well as the contour, texture and/or condition, the manufacturer cannot guarantee the ability of the light to remain in place upon a moving vehicle. It is the sole responsibility of the owner to ensure the warning light is secure.
- Once the light is secured, route your cord such that it does not interfere with the vision of the driver or the operation of any controls, including, but not limited to, the steering wheel, gear shifter, and/or any airbags (front and/or side).
- 4. This light has been factory tested and approved. If the light fails to work when the plug is inserted into the cigarette plug socket, twist the plug a few times to remove any ash or other deposits which might be preventing a good contact from being made. If the problem persists, remove the fuse from the circuit, check to see if it has blown, and clean the lighter socket and contact surfaces. Reconnect the fuse and test the light again.

If you are mounting the light on the roof of your vehicle, take extreme care to ensure that the magnet is firmly seated on your roof, and that the pull of the magnet is sufficient to secure the light in place. As the composition of the metal in the roofs of different vehicles may vary, as well as the contour, texture and/or condition, Star cannot guarantee the ability of the light to remain in place upon a moving vehicle. It is the sole responsibility of the owner to ensure the warning light is secure.

Parts List

Outer Dome	920-3-*
Colored Filter for Rotators	920-100-*
Inner Dome for Strobe Head	
Doubleflash Power Supply for 9200S	
Quadflash Power Supply for 9200SQ	
Strobe Head	ST3901-7
12V Halogen Bulb (50-Watt)	
12V Incandescent Bulb (35 Watt)	
24V Halogen Bulb (50-Watt)	
Rotator (95FPM)	
Rotator (150FPM)	920-0F
Plastic Wall Mirror for 9200H	920-30-3
"V" Mirror for 9200S	920-1S
Magnet (four required for mag mount)	920-16
Cord with Cig Plug	

ONE YEAR LIMITED WARRANTY

The manufacturer warrants each new product, under normal use, against factory defects in material and workmanship for one year after the date of purchase. The owner will be responsible for returning to the Service Center any defective item(s) with the transportation costs prepaid. The manufacturer will, without charge, **repair or replace** *at its option*, products, or part(s), which its inspection determines to be defective. Repaired or replacement item(s) will be returned to the purchaser with transportation costs prepaid from the service point. A copy of the purchaser's receipt must be returned with the defective item(s) in order to qualify for the warranty coverage.

Exclusions from this warranty include, but are not limited to, bulbs, strobe tubes, domes, and/or the finish. This warranty shall not apply to any light, which has been altered, such that in the manufacturer's judgment, the performance or reliability has been affected, or if any damage has resulted from abnormal use or service. This warranty does not apply to defect or damage occurring as a result of disaster, accident, abuse, misuse, lightning, power surges, or failure to follow instructions in any enclosed manuals. Any damage or defects occurring as a result of any unauthorized service or repairs by unauthorized persons shall be excluded from this warranty.

There are no warranties expressed or implied (including any warranty of merchantability or fitness), which extend this warranty period. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages, including costs of any labor, are not covered. The manufacturer reserves the right to change the design of the product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights. You might also have additional rights which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts. Some states do not allow the exclusion or limitation of incidental or consequential damages. Therefore, the above limitation(s) or exclusion(s) may not apply to you.

If you have any questions concerning this or any other Star product, please contact our **Customer Service Department** at (585) 226-9787.

If a product must be returned for any reason, please contact our Customer Service Department to obtain a Returned Goods Authorization number (RGA #) before you ship the product to Star. Please write the RGA # clearly on the package near the mailing label.

NOTICE

Due to continuous product improvements, we must reserve the right to change any specifications and information, contained in this manual at any time without notice. Star Headlight & Lantern Co., Inc. makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Star Headlight & Lantern Co., Inc. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.



Star Headlight & Lantern Co., Inc.





Phone: 585-226-9500 Toll Free Fax: 888-478-2797

